


# INSTALLATION UNIVENT

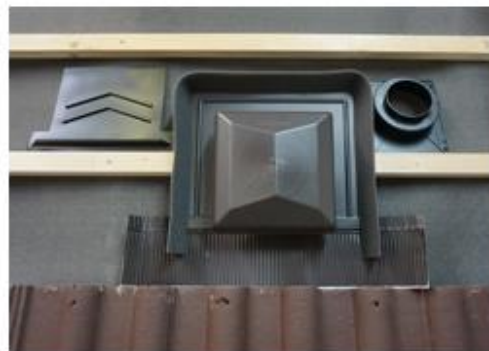

Package includes: Vent with selfadhesive butyl strip, adapter Ø160/110 mm and underlay protector.



Install batten for support under the vent.



Find and mark the centre between the tiles.



Place centre of the vent across from centre between the tiles.



Mark placement of the vent on the batten.



Hold underlay protector against the batten and mark for cut-out.



Cut for the underlay protector.



Slip underlay protector through the underlay and fasten to batten.



Flip the adapter from the back of the vent.



Click to fix the adapter to the vent.



Find and mark for cut-out for the adapter.



Cut an X.



Place the vent resting on the batten installed for support (ref. picture 2).



Vent placed.



Tiles must be dry and clean before fixing butyl. Remove protective foil from the butyl adhesive strip.



Press on profile high-point to fix butyl adhesive strip.



Press on profile low-point to fix butyl adhesive strip.



Mould butyl strip to allow water to escape.



Make sure butyl strip is firmly fixed. If necessary use roller.



Use hammer to adjust tiles on both sides of the vent where they rest on the foam wedge.



Make sure the gap between vent and tile is the same size on both sides.



Adjust the length of the tile above the vent to leave a gap of 15 mm



Finished installation.