

Donard / Derrie Installation Instruction





1. Locate a suitable position for the Tile Ventilator between the rafters and lay the surrounding tiles. Mark on the underlay the position of the circular penetration sleeve, make a diagonal cut in the underlay and fold back.

2. Cut a slit in the underlay, above the opening, and slide in the underlay protector unit, with the bottom edge located just above the opening in the underlay. Make sure that the diagonal cuts in the underlay are not wider than the underlay protector.

3. Install the Tile Ventilator, making sure that the penetration sleeve passes fully through the underlay. Ensure that the retaining clip is correctly located under the adjacent tiles. Nail Fix through the holes provided.

Important: Where nail holes are provided in the top edge of the vent these should be used. On these vents, do not attempt to nail through the face of the vent without pre-drilling.

4. Continue tiling in the normal manner.

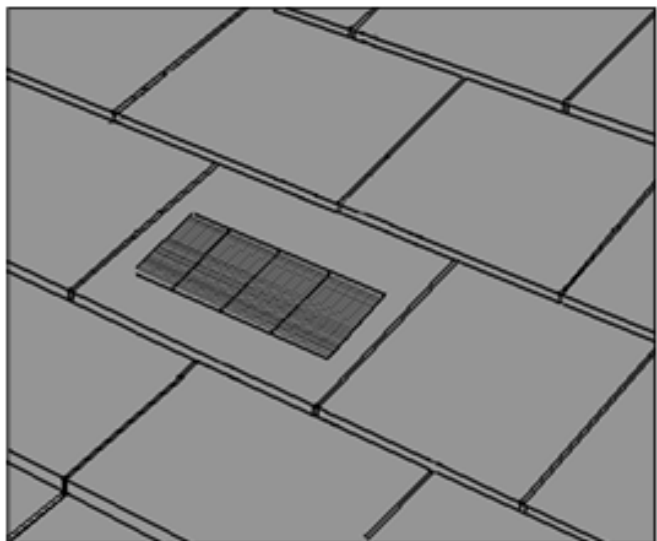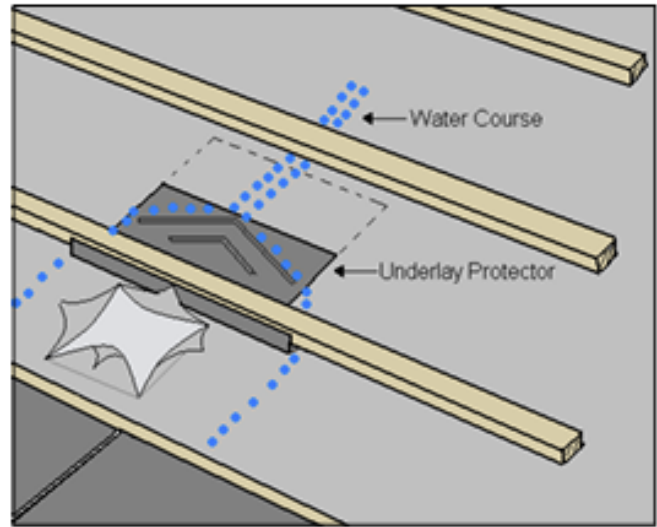

Important: Do not use for hot flue gases

With mechanical ventilation a condensation trap must be used.

For further technical advice please ask for our data sheet
and assembly document, or contact:


NORTHSTONE
A CRH COMPANY

Roadstone Ltd
Retail Shop
Belgard Road
Dublin 24
Tel: 01 4041275

Northstone Ltd
Retail Shop
Creagh Road
Toomebridge

Tel: 0044 28 7965 1317

Roadstone Ltd
Retail Shop
Classis Ballincollig
Co Cork
Tel: 021 4800118

 **roadstone**
A CRH COMPANY